


HEADER SEAL
INSTALLATION

Attach header seal with 1/4" wedge bolt and 1/4" flat washer when mounting to concrete or block. Use Powers drill number 01314.


**Header Seal
Installation—
Masonry Mount**

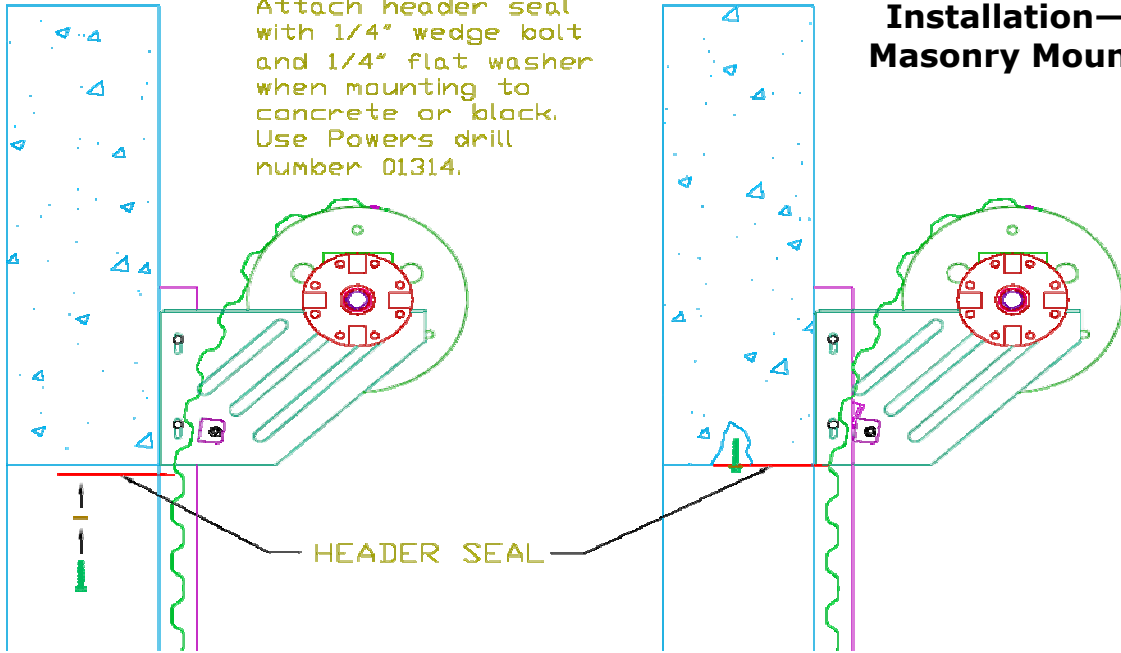

HEADER SEAL
INSTALLATION

Attach header seal with 1/4" TEKS screw and a 1/4" flat washer when mounting to steel.

**Header Seal
Installation—
Steel Mount**

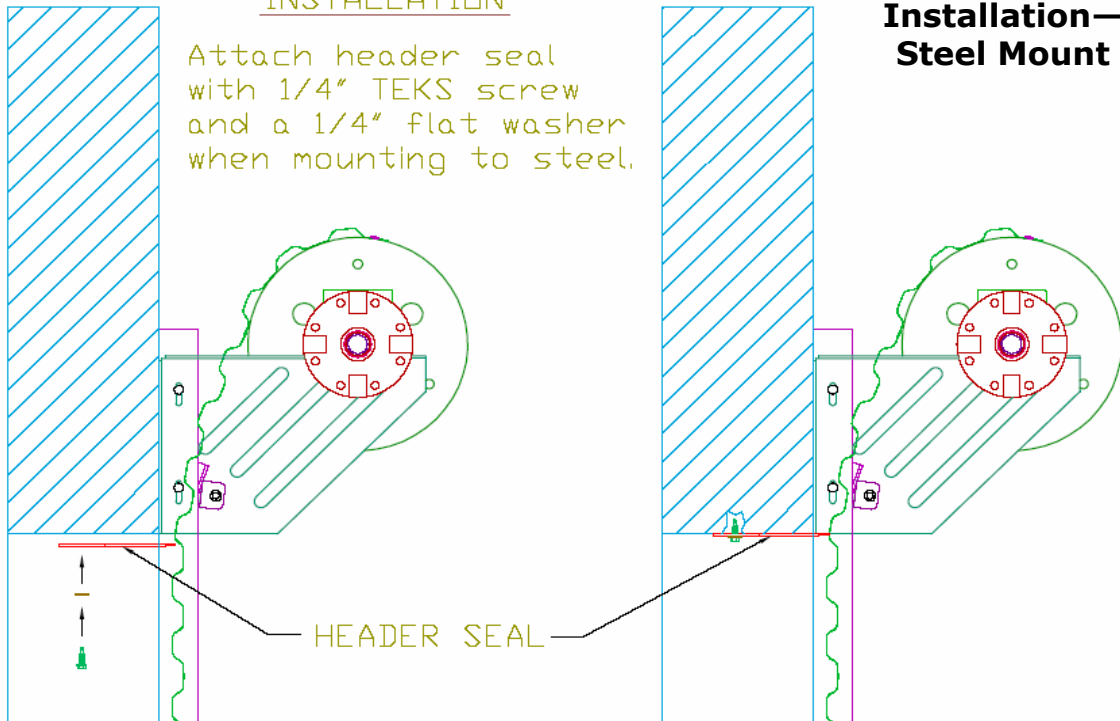

HEADER SEAL
INSTALLATION

Attach header seal with 1/4" lag screw and a 1/4" flat washer when mounting to wood.

**Header Seal
Installation—
Wood Mount**

